




Sony BDP-BX620 Power Module Replacement

Removing the Power Module

Written By: Axel Cruz Jimenez


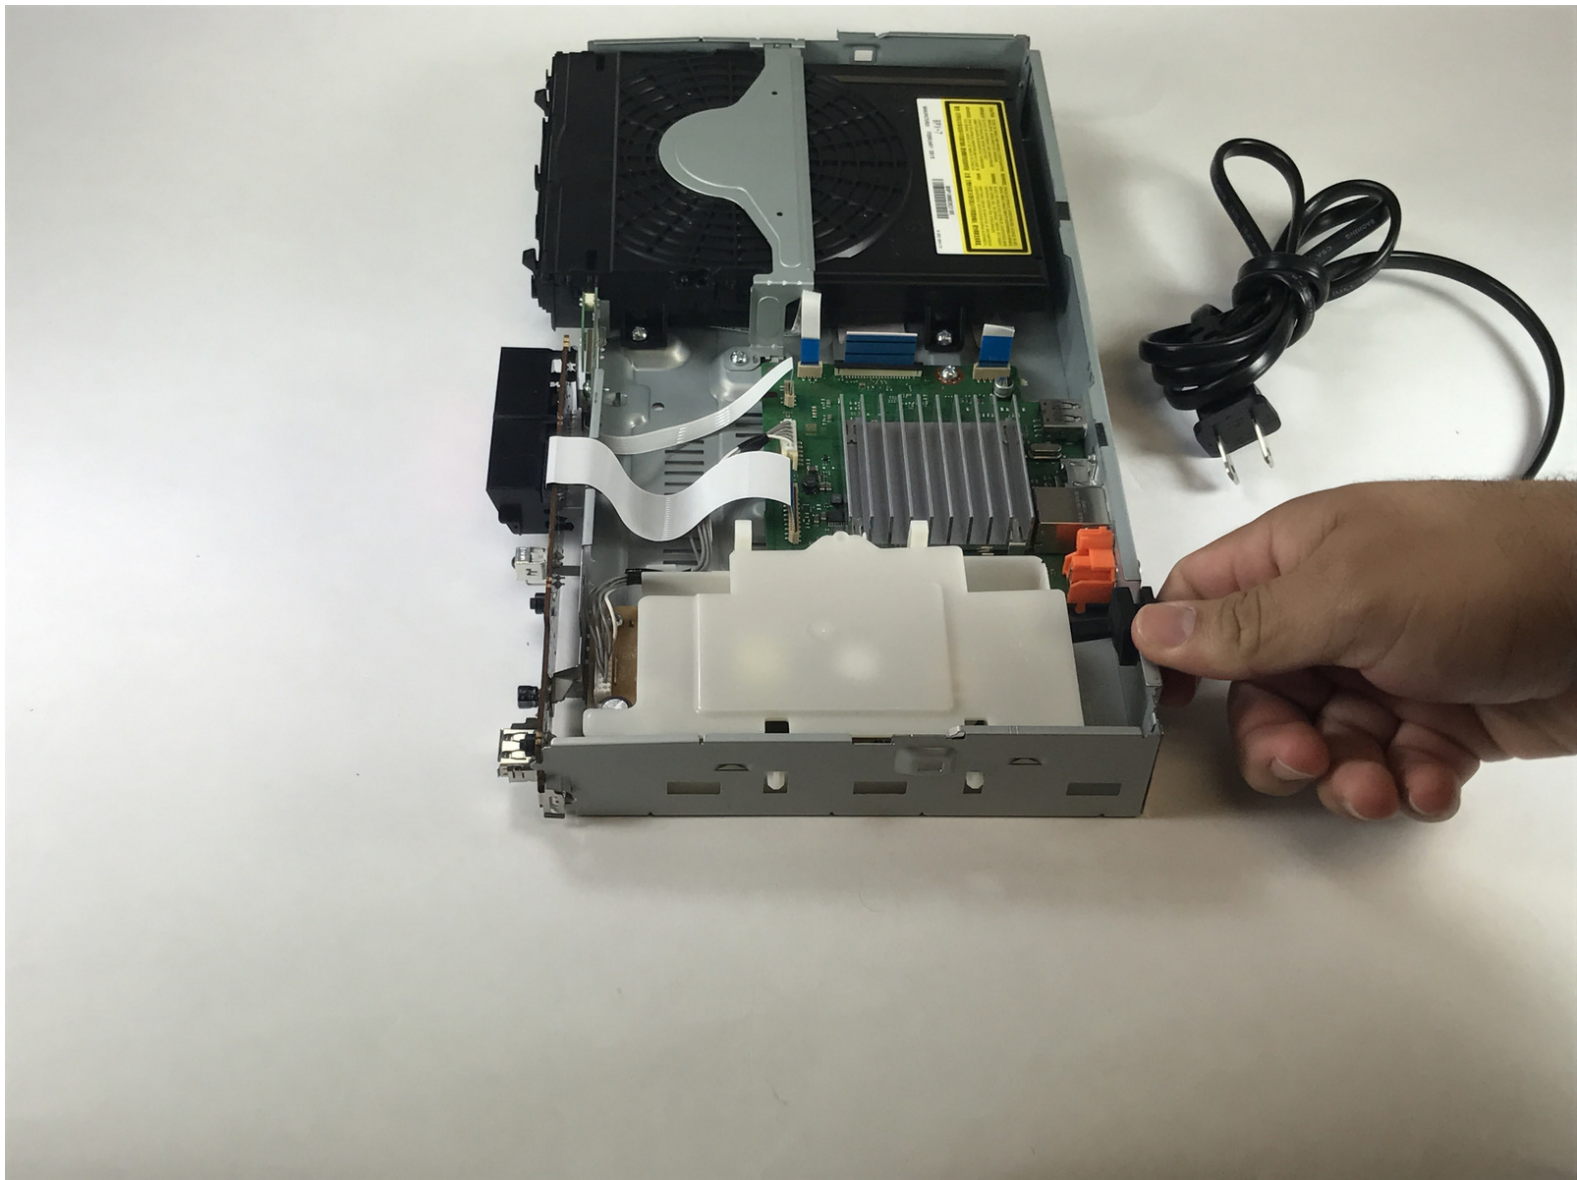




TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Outer Cover

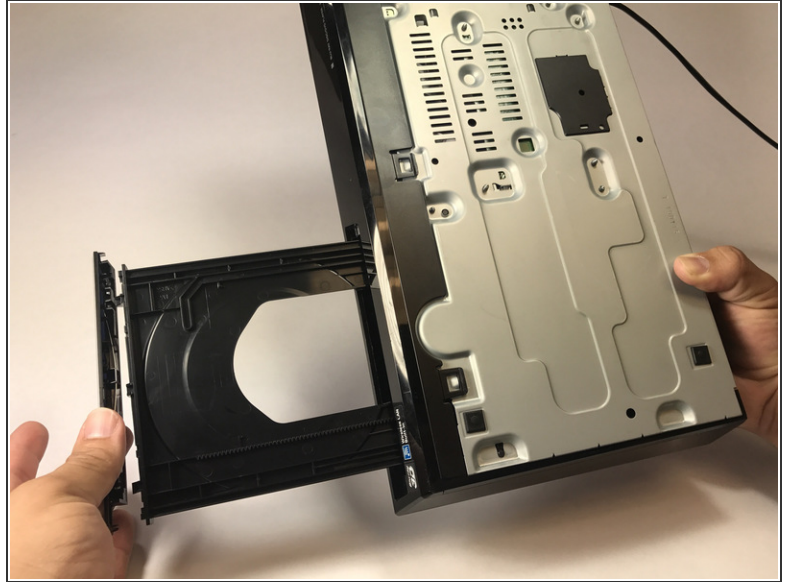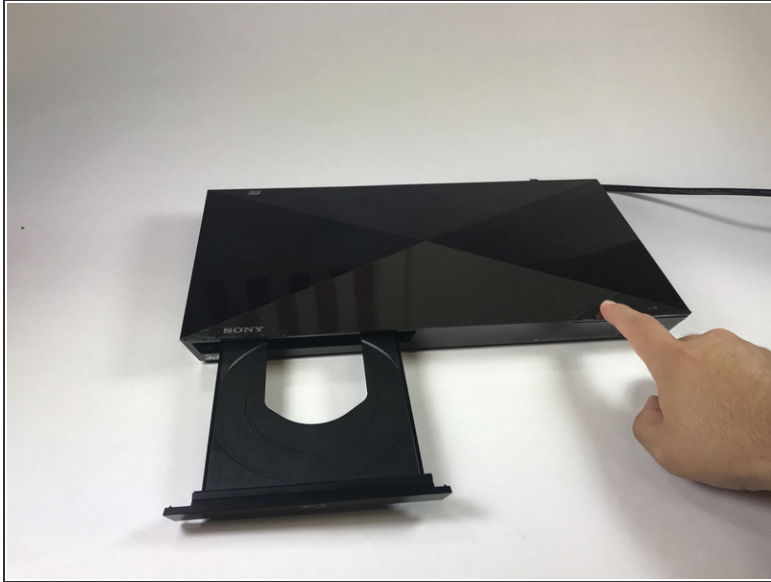

- Power on the device, eject the disk tray, and power off the device.
- Turn the device over.
- Lightly apply downward pressure on the black covering on the disk tray until it snaps off.


⚠ Caution, applying too much pressure can break the black covering.

Step 2



- Turn the device around.
- Using a Phillips screw driver, remove the screws on both ends of the device circled red in the image.
- Slide the side covers on either side towards the back of the device.
- ⓘ There is a back cover on either side of the device.

Step 3

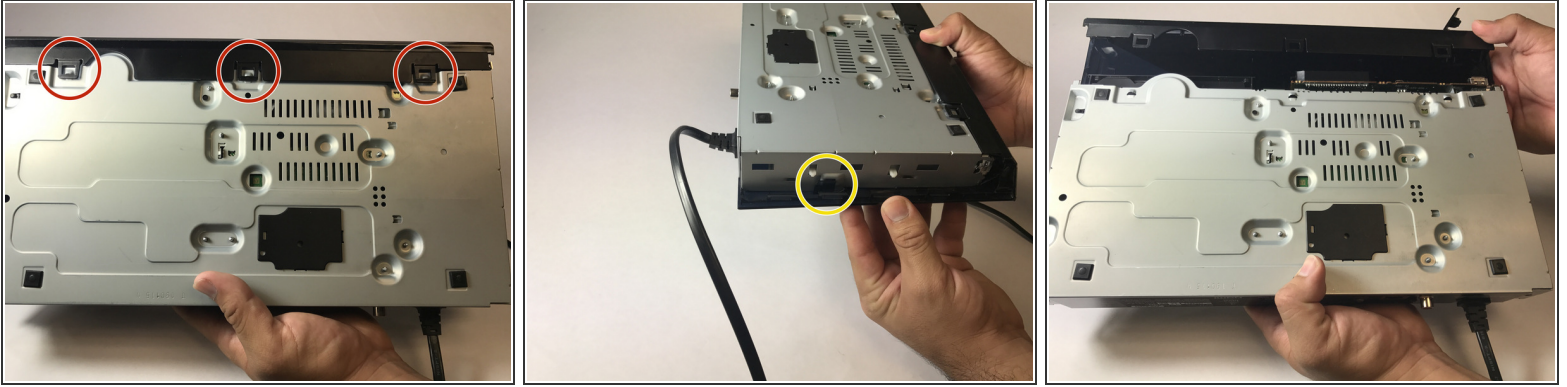


i This step might require someone to help unclasping the plastic clips.

- Turn the device so that the bottom is facing up.
- In the bottom, unclip the three plastic clips circled in red.
- On either side, unclip the plastic clip circled in red
- Slide the black covering forwards to remove.

i All five clips have to be unclaspd for the covering to be removed.


! Careful not to break the plastic clips when putting it back on.

Step 4 — Power Module

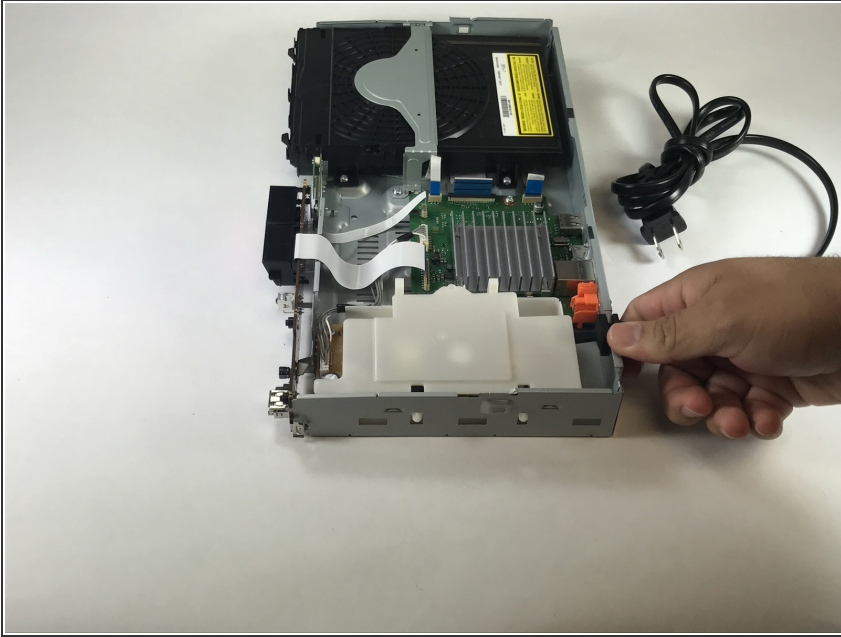


- Gently pull on up on the power cord to unlatch it from the metal body of the device.

Step 5

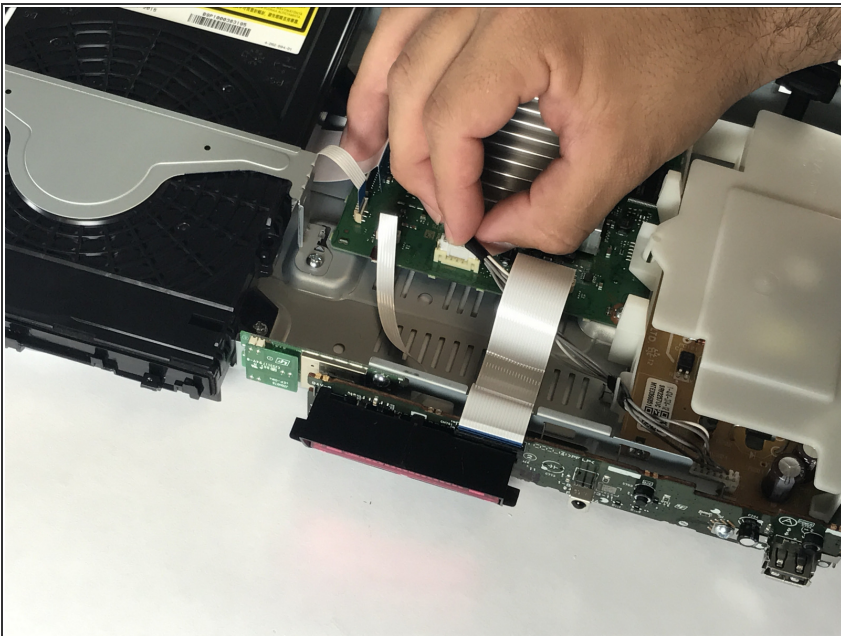


- Remove the cable connecting the Power Port to the Motherboard by pulling up.
- ⚠ It may be difficult to remove. Pull from the plastic part and not the wiring to prevent the wiring from breaking.

Step 6

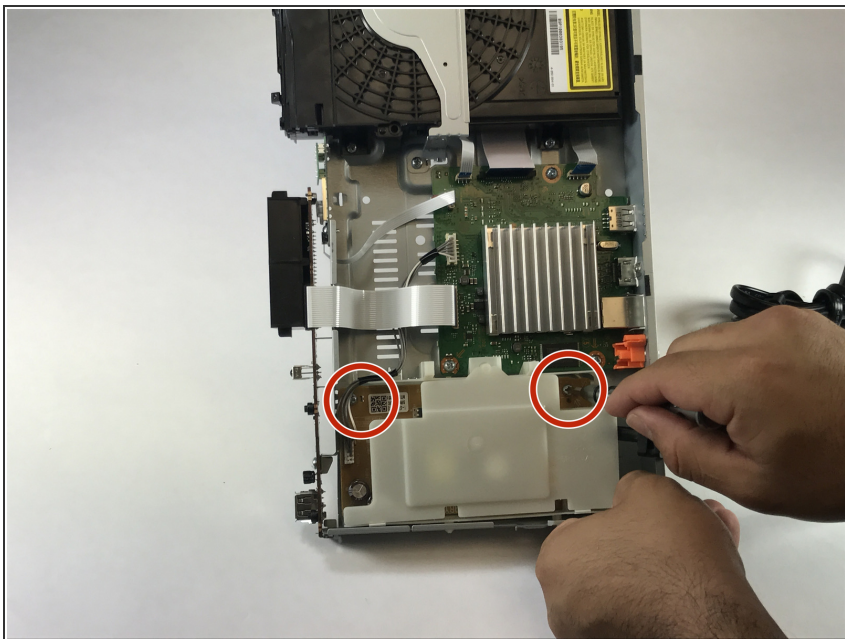

- Remove both screws using the Phillips screw driver.

Step 7

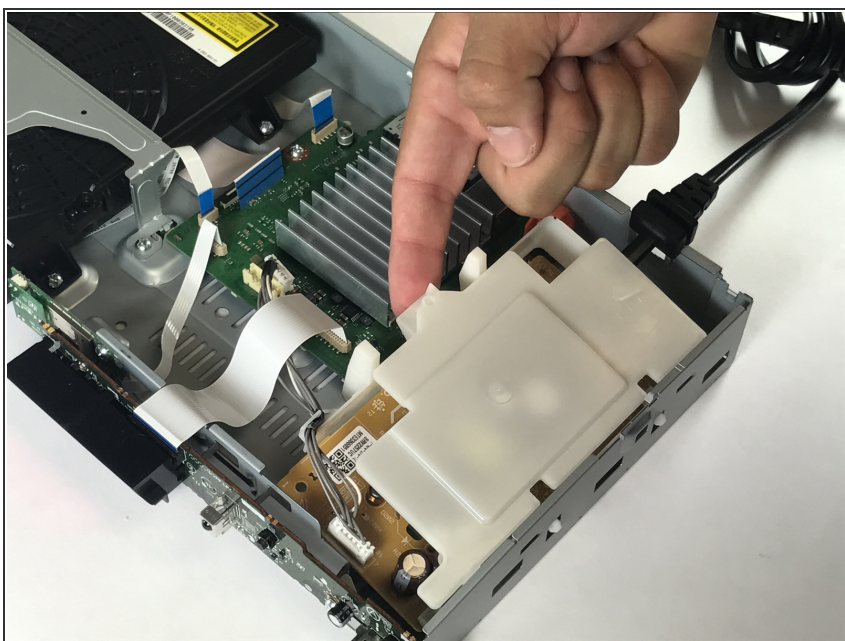

- Lift the Power Module up from the side located inside the device.
- Pull up and away to remove the Power Module

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:48:13 AM.